

# Operating Manual

## Flame proof Scale



## SETTING & CALIBRATION PROCEDURE:



Key to Press	:	Display
<MODE> and Switch ON the scale	:	dpset ( DECIMALPOINT)
<ENT>	:	0
<ENT>	:	Ld Set ( LEAST COUNT SET)
<ENT>	:	0
<ENT>	:	CAPcT ( CAPACITY OF FULL SCALE)
<ENT>	:	060000
<ENT>	:	CAL ?
<ENT>	:	LOAD

NOW PUT KNOWN STD WEIGHT VALUE (1000 kg) AND ENTRY VALUE by press PCS key for increment and by arrow key shift the digit

<ENT>	:	1000
<ENT>	:	UnLd ( now remove std weight)
<ENT>	:	000

Now scale is Calibrated and scale is ready to use.

### To make tank weight zero:

Press MODE key for 5- 10 seconds, it will make Tank weight zero in system.

### Output 0 to 10 Vdc

Display shows 0 kg = 0 volt

Display show full load 60000 kg = 10 volt

Above setting is automatic stores in system , once full load capacity is entered while calibration procedure.

It his only one time setting.

## LIMITED WARRANTY

ACZET products are warranted against defects in materials and workmanship from the date of delivery through the duration of the warranty period. During the warranty period Aczet will repair, or, at its option, replace any components(S) that proves to be defective at no charge, provided that the product is returned, freight prepaid, to ACZET.

This warranty does not apply if the product has been damaged by accident or misuse, exposed to radioactive or corrosive materials, has foreign material penetrating to the inside of the product, or as a result of service or modification by other than ACZET. In lieu of a properly returned warranty registration card, the warranty period shall begin on the date of shipment to the authorized dealer. No other express or implied warranty is given by Aczet Pvt. Ltd.

As warranty legislation differs from state to state and country to country, please contact aczet or your local ACZET dealer for further details.

ACZET service center will repair the product free of charge subject to terms & condition mentioned below.

### **TERMS & CONDITION**

- 1.It covers only weighing balance purchased from authorized channel and does not covers accessories like Battery, Adaptor, RS232 cable, Pan, Pan support etc
- 2.It does not cover the product of which model and serial number has been altered, removed or defaced and / or is open by unauthorized person and found void sticker has been tampered.
- 3.This warranty is non-transferable and applicable only to first end user purchasing the product from authorized dealer.
- 4.For repair based on this warranty you need to hand over this product or send this product to address mentioned in warranty card in original packing, enclosing copy of this warranty card.
- 5.Aczet Pvt. Ltd. shall not be liable for any consequential damages.

## WARRANTY REGISTRATION



ACZET PVT.LTD.  
E2, Plot No. 15, WICEL Estate,  
Opp. Seepz Gate No. 1,  
Andheri (E), Mumbai 400 093  
E-mail : service@aczet.com  
web: www.aczet.com  
Tel. No. : +91 22 4243 7700  
Fax No. : +91 22 4243 7800

NAME :- .....

ADDRESS :- .....

TEL NO. :- ..... MODEL NO. :- .....

SERIAL NO. :- ..... PURCHASE DATE :- .....

BRANCH / DISTRIBUTOR / DEALER CONTACT DETAILS
STAMP / SIGN

WARRANTY PERIOD :- .....

\_\_\_\_\_

Owners Signature / Date

SEND YOUR WARRANTY CARD DULY FILL TO ABOVE ADDRESS FOR REGISTRATION