

Airport Baggage Scale CTG Series



Main screen information includes:

- Weight on scale (5 digits).
- Total bags (2 digits).
- Total bags weight (5 digits).

Special features & application at Airport baggage check in counter


- OIML approved
- Four load cells systems.
- Keypad 4-function keys
- Metal housing with with stainless steel front frame
- Operator panel: dot matrix LCD display-4 lines
- Passenger panel: 3 row high brightness LED for displaying bag weight , counts of bag and total wt of bags.
- Feature : To ADD& subtract baggage weight.
- Scale Base

Beeper Sound -

- Short Beep to indicate a Valid Operation.
- Long Beep to indicate an Invalid Operation or Scale Overload.
- Period Beep to indicate Alarm for Overload/Under Zero when Total Weight is above the Preset Weight Limit.
- Scale Interface : 4-wires Load Cell.
- Weighing function Audible Alarm for Over load and Under-Zero.
- Push Button Zero: $\pm 2\%$ of Scale Full Capacity.
- Weight Setpoint function Audible Alarm when Baggage(s) Weight exceeds the Preset Weight Limit.
- Accumulation function Individual Passenger Bags Number (2 digits).
- Total Weight Accumulation (5 digits).
- RS 232 Communication Interface With Host System.
- Settings : 9600, 8 Data Bits, 1 Stop Bit, Parity: None.
- Weight : 1.9 kg.

Passenger Panel

High brightness LED display size: 12.5 mm
Panel Mounting design

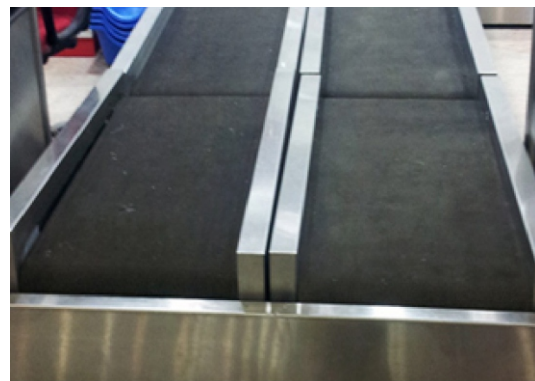

Technical specification

- Capacity :- 300 kg & above .
- Redability :- 100 g
- Platform size :- 600 x 800 mm
- Power :- 230Vac, Single Phase
- Operating Temp. :- 10°C 40°C

Scale Base

WORLDWIDEMARKETING

ACZET PVT. LTD.

Unit E2, Plot No. 15, WICEL Estate, Opp Seepz Gate Nol. 1, Andheri (E), Mumbai 400 093. (INDIA)
Tel. : +91-22-4243 7700 • Fax : +91-22-4243 7800 • E-mail : sales@aczel.com • Web : www.aczel.com